


Hardware Application (3L 2R)

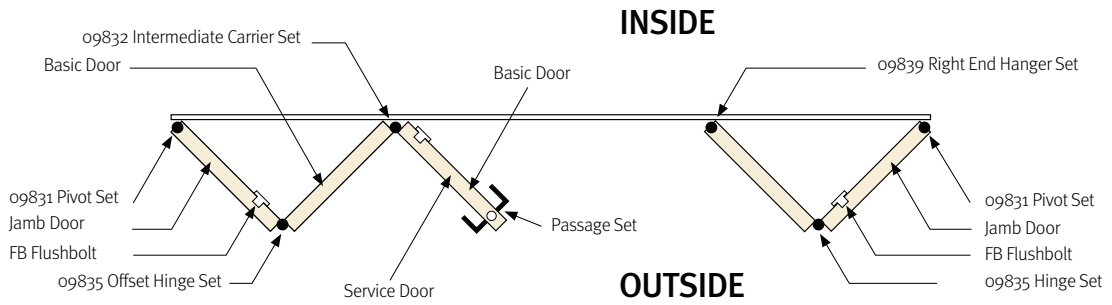


Common Panel Layouts for Outward Opening Doors

| Hardware Legend | |
|---------------------------------------|---|
| 09831 Pivot set | 09835 Outward offset hinge set |
| 09832 Intermediate carrier set | 09833 Outward straight hinge set |
| 09834 Left carrier set | FB Flushbolt |
| 09839 Right carrier set | |


Common Panel Layouts for Inward Opening Doors

| Hardware Legend | |
|---------------------------------------|--|
| 09831 Pivot set | 09837 Inward offset hinge set |
| 09832 Intermediate carrier set | 09840 Inward straight hinge set |
| 09834 Left carrier set | FB Flushbolt |
| 09839 Right carrier set | |

 Outward Application Option



Inward Application Option

 

| Outward Opening Configurations | |
|--------------------------------|--|
| 2 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09834, 09833. Legend: ● = Flushbolt Locations |
| 2+1 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09834, 09831, 09833 |
| 3 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09832, 09835 |
| 2+2 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09834, 09839, 09831, 09833, 09833 |
| 3+1 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09832, 09831, 09835 |
| 4 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09832, 09834, 09835, 09835 |
| 3+2 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09832, 09839, 09831, 09835, 09833 |
| 4+1 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09832, 09834, 09831, 09835, 09835 |
| 5 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09832, 09832, 09835, 09833 |
| 3+3 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09832, 09832, 09831, 09835, 09835 |
| 4+2 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09832, 09834, 09839, 09831, 09835, 09833 |
| 5+1 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09832, 09832, 09831, 09835, 09832 |
| 6 LEAF | INSIDE / OUTSIDE diagram showing hardware 09831, 09832, 09832, 09834, 09835, 09833, 09835 |

| Inward Opening Configurations | |
|-------------------------------|--|
| 2 LEAF | INSIDE / OUTSIDE diagram showing hardware 09840, 09831, 09839. Legend: ● = Flushbolt Locations |
| 2+1 LEAF | INSIDE / OUTSIDE diagram showing hardware 09840, 09831, 09839, 09831 |
| 3 LEAF | INSIDE / OUTSIDE diagram showing hardware 09837, 09831, 09832 |
| 2+2 LEAF | INSIDE / OUTSIDE diagram showing hardware 09840, 09840, 09831, 09839, 09834, 09831 |
| 3+1 LEAF | INSIDE / OUTSIDE diagram showing hardware 09837, 09831, 09832, 09831 |
| 4 LEAF | INSIDE / OUTSIDE diagram showing hardware 09837, 09837, 09831, 09832, 09839 |
| 3+2 LEAF | INSIDE / OUTSIDE diagram showing hardware 09837, 09840, 09831, 09832, 09834, 09831 |
| 4+1 LEAF | INSIDE / OUTSIDE diagram showing hardware 09837, 09837, 09831, 09832, 09839, 09831 |
| 5 LEAF | INSIDE / OUTSIDE diagram showing hardware 09837, 09840, 09831, 09832, 09832 |
| 3+3 LEAF | INSIDE / OUTSIDE diagram showing hardware 09837, 09837, 09831, 09832, 09832, 09837, 09831 |
| 4+2 LEAF | INSIDE / OUTSIDE diagram showing hardware 09837, 09837, 09831, 09832, 09839, 09834, 09831 |
| 5+1 LEAF | INSIDE / OUTSIDE diagram showing hardware 09837, 09840, 09831, 09832, 09832, 09831 |
| 6 LEAF | INSIDE / OUTSIDE diagram showing hardware 09837, 09840, 09837, 09831, 09832, 09832, 09839 |