FITTING INSTRUCTIONS FOR FLEXIGLAS 50

COMPONENTS



51120/30/40/60 - Anodized Aluminium

51230/40/60 - Satin Stainless Steel



51172 - Flexiglas fitting set, anodized aluminium, 50kg



51272 - Flexiglas fitting set, satin stainless steel, 50kg



51181 - Flexiglas 50 standard kit, anodized aluminium



51281 - Flexiglas 50 standard kit, satin stainless steel



51171 - End caps (set of 2), anodized aluminium




51271 - End caps (set of 2), satin stainless steel

51191 - Flexiglas 50, double soft closing kit, 50kg

Required tools

Allen Key







Posi drive screw bit



Drill bit



Technical Specifications

FLEXIGLAS 50 Maximum door weight 50kg


DH - Door height, maximum 2400mm

DWi - Door width

DT - Door thickness, 8mm or 10mm

OW - Opening width


OH - Opening height

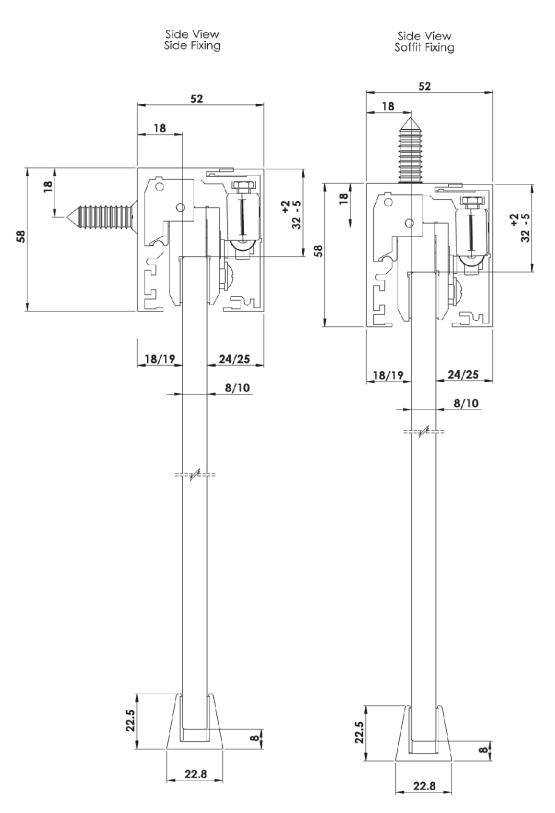

Step 1 Fixing track

Face Fixed: track comes pre-drilled, mark the position of the levelled track on the wall and fix it with screws

Soffit Fixed: track needs to be predrilled, mark the ceilling and fix the track with screws

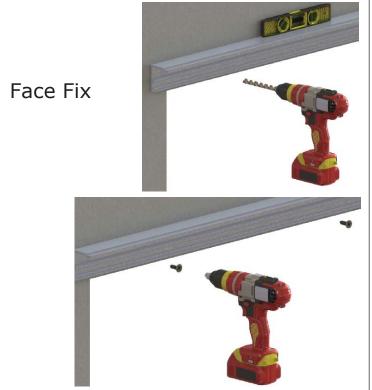







Step 2 Door hardware overview

Soft closer actuator (Syncro Kit option is also available)

>35

= >35

>35

8mm door

Thoroughly clean the glass surface that comes into contact with the rubber spacers

2.5

2.5

1.25

1.25

a. Prepare all required components

a.


b. Insert the rubber spacers on each side between the door and the hanger


NOTE: If you opted for a soft closer or syncro kit also refer to the appropriate instructions


DO NOT USE GLUE c. Tighten the screws with 12Nm force

d. Insert the grub screw



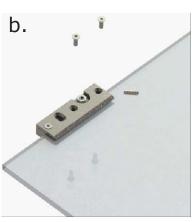

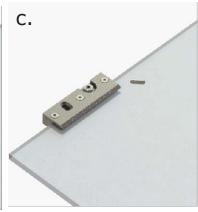

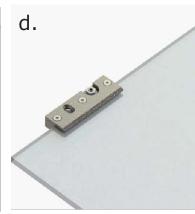

Step 4 Prepare hangers and fix with 8mm door

a. Prepare all required components




b. Insert the rubber spacers on each side between the door and the hanger


DO NOT USE GLUE


NOTE: If you opted for a soft closer or syncro kit also refer to the appropriate instructions


c. Tighten the screws with 12Nm force

d. Insert the grub screw

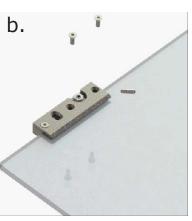

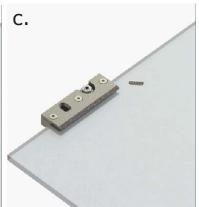


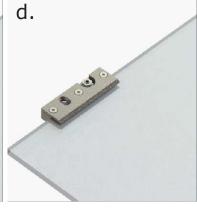


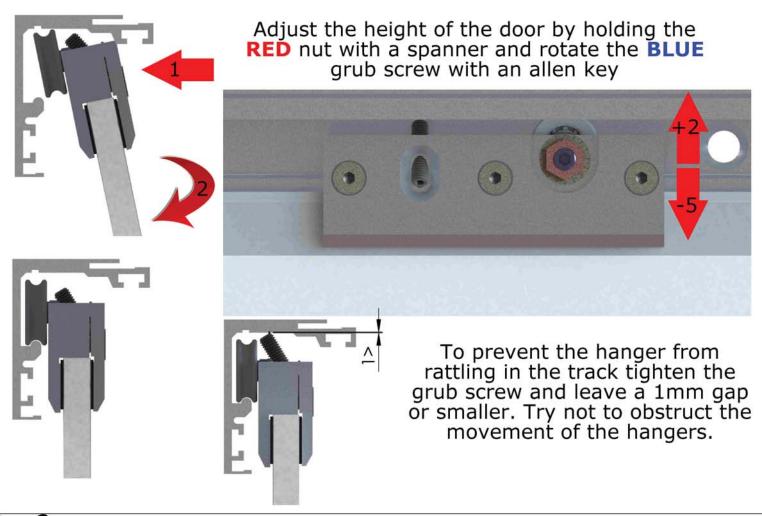

Step 6 Install the bottom guide

Ensure the door is level, mark the position of the guide and secure it with screws

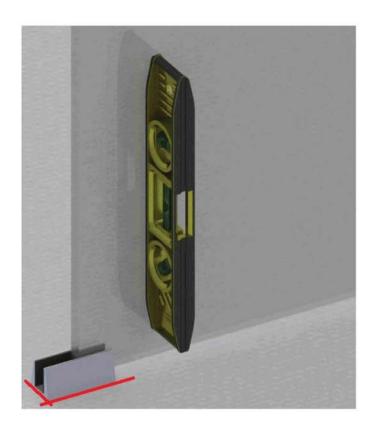

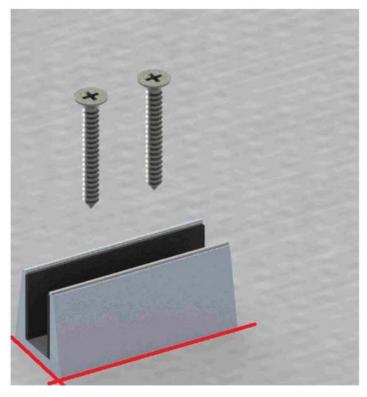







Insert stopper into track and secure it with screws

NOTE: If you opted for a soft closer or syncro kit also refer to the appropriate instructions

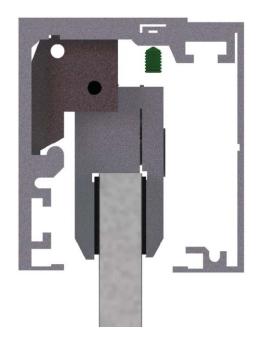

Put the track front cover and secure with screws supplied

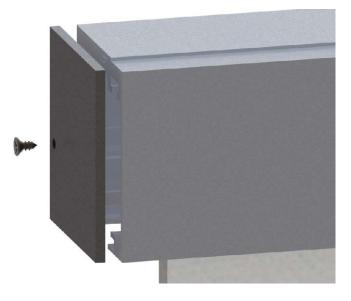

Put end caps into position and secure with screws

FLEXIGLAS 50



Coburn Sliding Systems Limited
Unit 1, Cardinal West, Cardinal Way,
Godmanchester, PE29 2XN, United Kingdom

Phone: +44 (0)20 8545 6680

Fax: +44 (0)20 8545 6720

E-mail: sales@coburn.co.uk

www.coburn.co.uk