

Bottom Guide 61911

FITTING INSTRUCTIONS FOR BOTTOM GUIDE 61911

CONTENTS



1X SUB FLOOR GUIDE



1X FINISHED FLOOR GUIDE



1X GROOVE COVER

3X M3x16 SCREWS

1X M5X32 SCREW



Coburn Sliding Systems Limited
Unit 1, Cardinal West, Cardinal Way,
Godmanchester, PE29 2XN, United Kingdom

Phone: +44 (0)20 8545 6680

Fax: +44 (0)20 8545 6720

E-mail: sales@coburn.co.uk

www.coburn.co.uk

Coburn Sliding Systems Limited, Unit 1, Cardinal West, Cardinal Way, Godmanchester PE29 2XN
Tel: +44 (0)20 8545 6680 Fax: +44 (0)20 8545 6720 . E-mail: sales@coburn.co.uk
www.coburn.co.uk

PART No. 06426.37



Bottom Guide 61911

FITTING INSTRUCTIONS FOR BOTTOM GUIDE 61911

CONTENTS



1X SUB FLOOR GUIDE



1X FINISHED FLOOR GUIDE



1X GROOVE COVER

3X M3x16 SCREWS

1X M5X32 SCREW



Coburn Sliding Systems Limited
Unit 1, Cardinal West, Cardinal Way,
Godmanchester, PE29 2XN, United Kingdom

Phone: +44 (0)20 8545 6680

Fax: +44 (0)20 8545 6720

E-mail: sales@coburn.co.uk


www.coburn.co.uk

Coburn Sliding Systems Limited, Unit 1, Cardinal West, Cardinal Way, Godmanchester PE29 2XN
Tel: +44 (0)20 8545 6680 Fax: +44 (0)20 8545 6720 . E-mail: sales@coburn.co.uk
www.coburn.co.uk

PART No. 06426.37




Step 1 Routing for guide channel

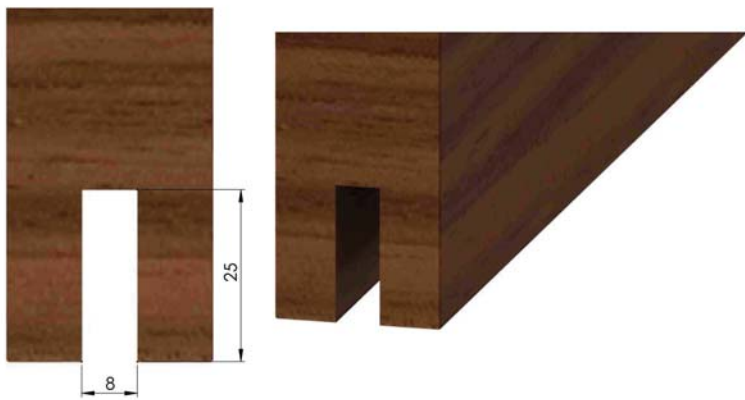


Route a 8mm x 25mm channel in the middle bottom of the door

Step 2 Routing for groove cover

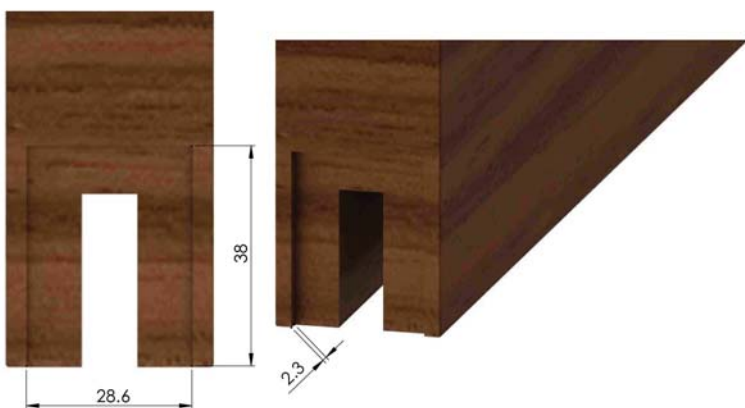


Mortise 2.3mm in depth, 28.6mm wide and 38mm high

Step 1 Routing for guide channel

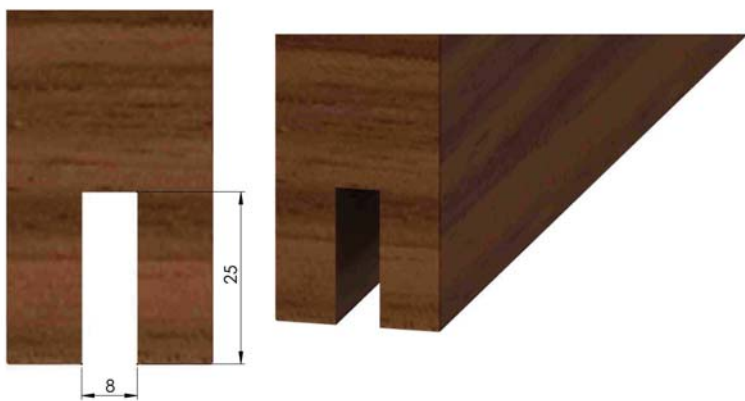


Route a 8mm x 25mm channel in the middle bottom of the door

Step 2 Routing for groove cover

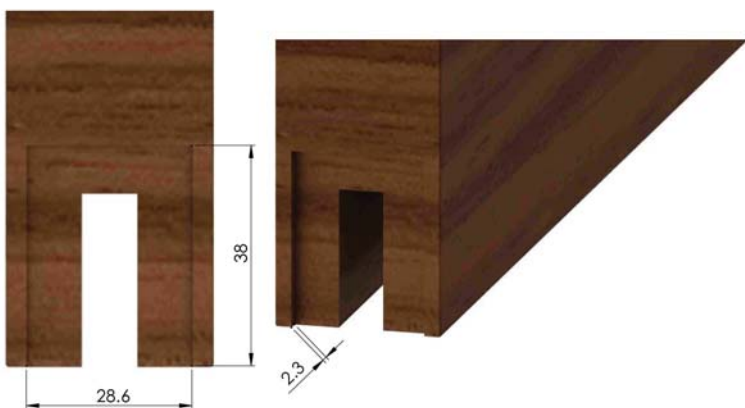

Mortise 2.3mm in depth, 28.6mm wide and 38mm high

Step 3 Installing the guide

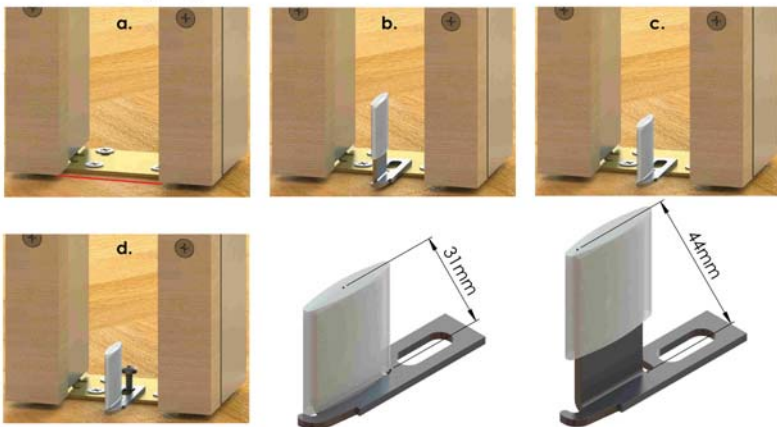


- The guide must be located at the edge of front pocket opening and it must ensure that the door is central in pocket.
- Use the tall guide if guide is attached to the sub-floor.
- Use the short guide if the guide is attached to the finished floor.
- Use the screw supplied to fix in place the guide.

Step 4 Installing the groove cover



Step 3 Installing the guide

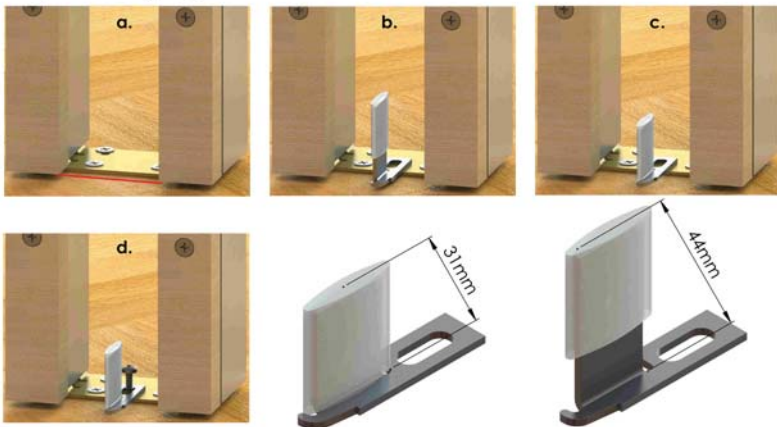

- The guide must be located at the edge of front pocket opening and it must ensure that the door is central in pocket.
- Use the tall guide if guide is attached to the sub-floor.
- Use the short guide if the guide is attached to the finished floor.
- Use the screw supplied to fix in place the guide.

Step 4 Installing the groove cover

