

# INSERDOR GLASS DOOR FITTING KIT FITTING INSTRUCTIONS

## NOTE:

Maximum door weight is 80kg without security pins  
and 120kg with security pins

DT – Door thickness, between 8mm and 12mm






61422 – INSERDOOR

GLASS DOOR FITTING KIT

## Step 1 Glass Door Preparation for security pins (for weights over 80kg)



Drill two  $\varnothing 8$ mm holes on the left and two  $\varnothing 8$  on the right side of the door. Use dimensions from detail a and b.

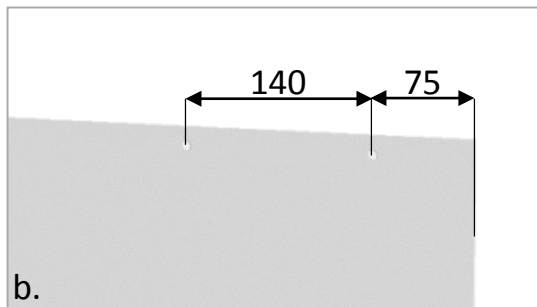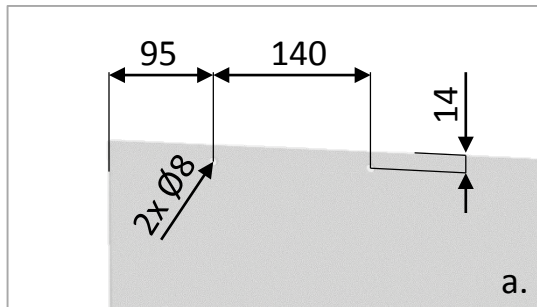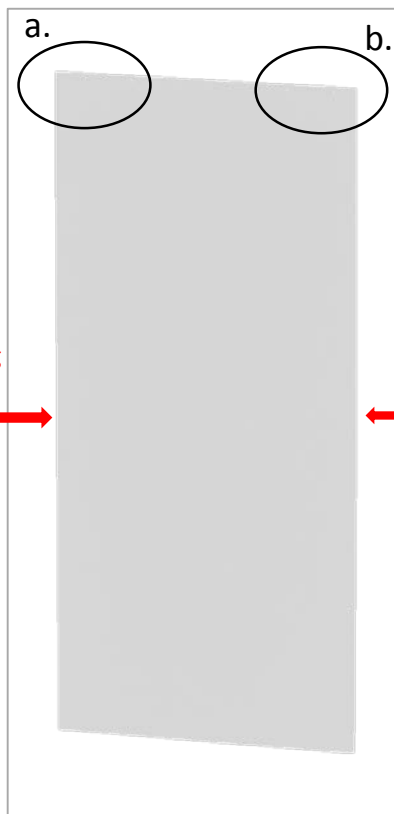

Side facing  
inside of pocket

**NOTE:**  
Pay particular attention and identify the pocket and opening side of the door.


# Step 2 Clamp Installation

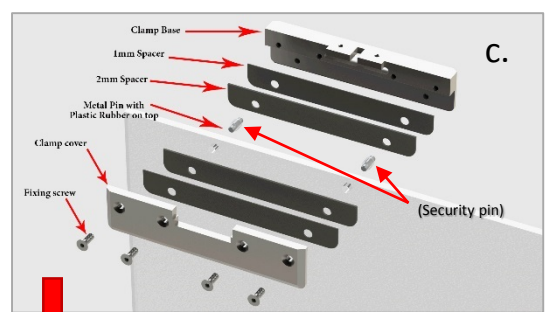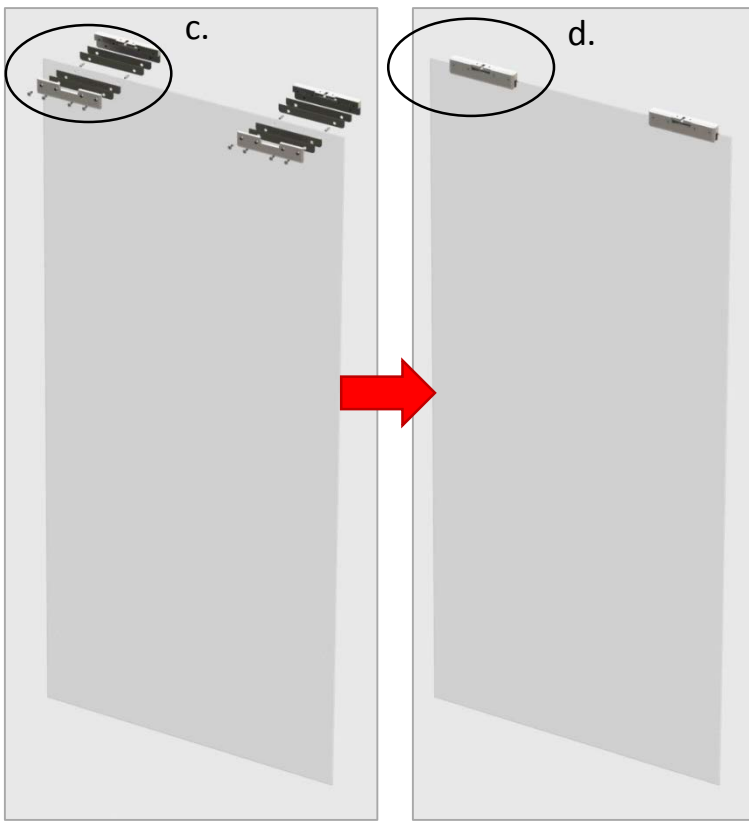

DT=8mm => 2x 2mm spacer  
 DT = 10mm => 1x 1mm spacer + 1x 2mm spacer  
 DT=12mm => 2x 1mm spacer


Assemble clamps onto door and secure with fixing screws

# Step 3 Door Installation

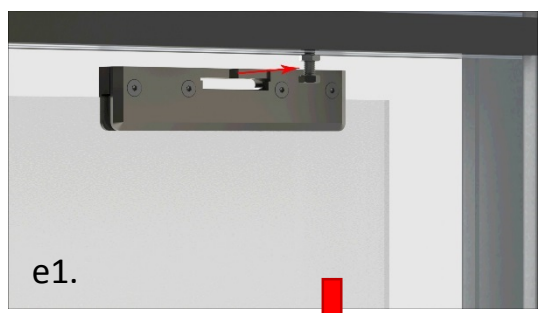


Place both clamps on pendant bolt

# Step 4 Door Adjustment

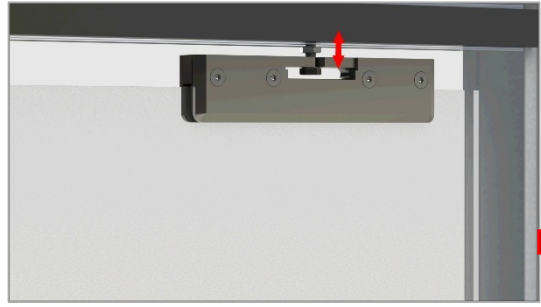


Adjust height and level with pendant bolt.

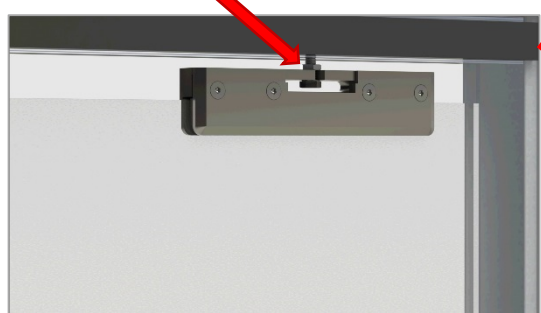


Secure position by tightening nut.

# Step 5 Bottom Guide Installation

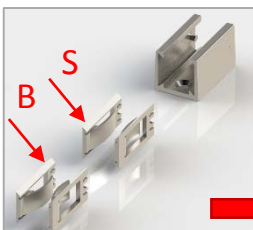

B= Big spacer  
S= Small spacer  
DT = Door thickness

DT=8mm => 2x B  
DT = 10mm => 1x S + 1xB  
DT=12mm => 2x S

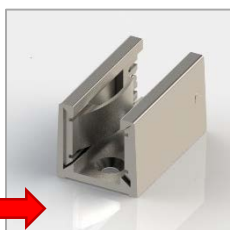

Place guide in position and secure with screws



